

# Single Turn Trim Wrap


Bill Worden

First wrap a length of trim thread around the blank with the intersection just above where you want the trim to be. Tape it in place. Make sure both tag ends are at the same angle below the intersection so if they show under the main wrap they look equal.



Then start your main wrap, Starting just below the intersection, making about 5 turns, trim the main tag, make another wrap and tape the main thread in place.


Then Place a toothpick between the "legs" and start drawing the trim down with one tag of the trim.

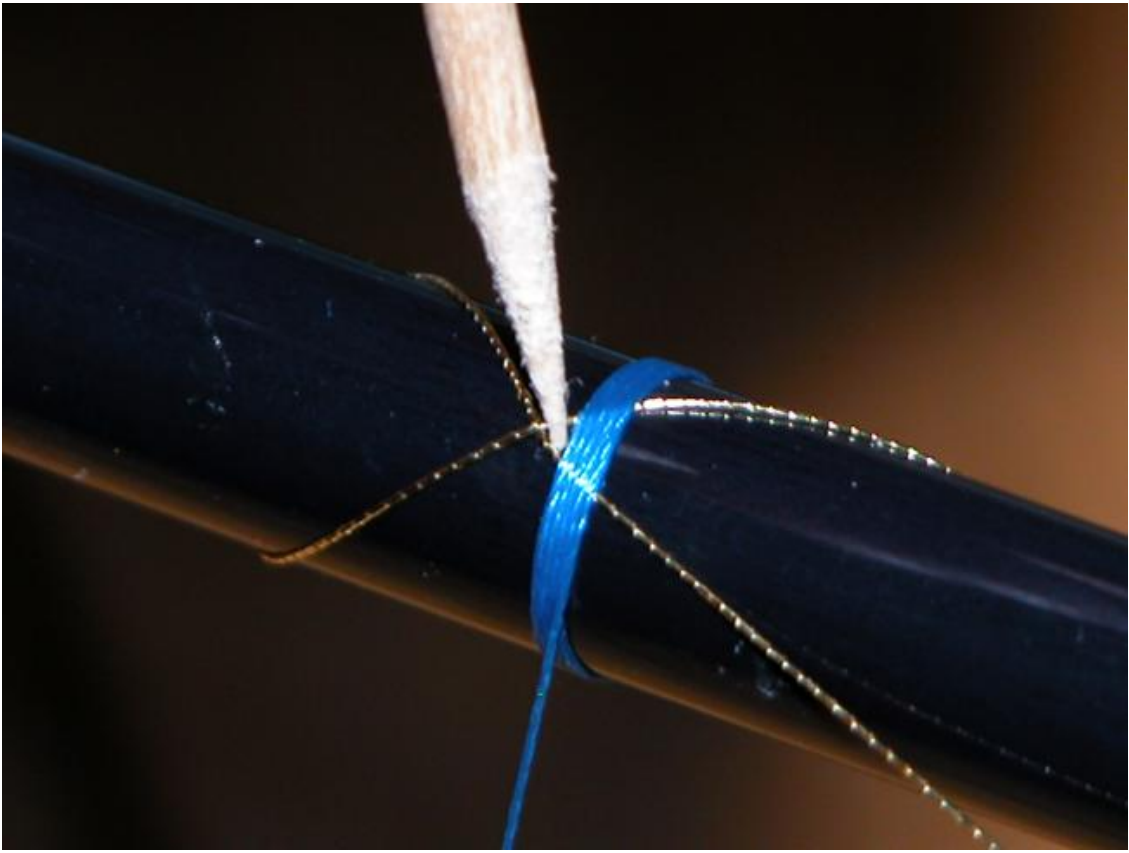

As you get close remove the toothpick and pack the trim in as you go.



After snugging the trim up tight, cut both tag ends

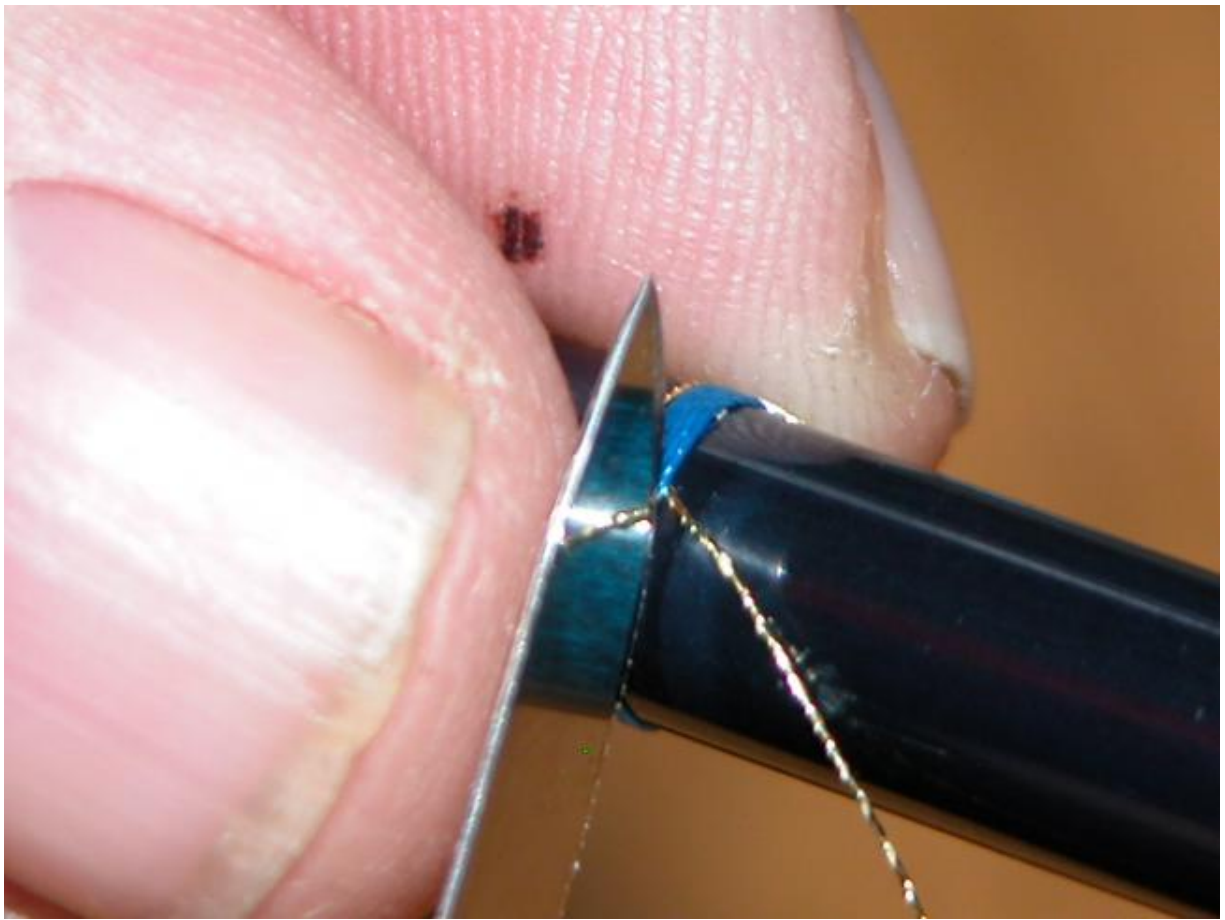

Continue the main wraps as usual.

